


Step 8 - Attach washer to bolt and slide through the hole provided.

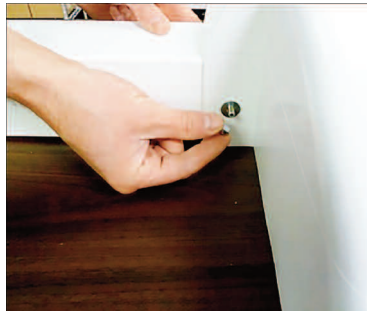

Step 9 - Slide washer onto bolt on opposite side and attach the nut. Hand tighten as much as possible. Use a ratchet or wrench to securely tighten nut.



Step 10 - Repeat instructions on the remaining jump standards.



**PREMIER
EQUESTRIAN**

The Arena Company

PolyPro Schooling Standards Assembly Instructions



PACKAGE CONTENTS:

- 2 PolyPro Feet
- 4 Side Supports
- 12 Washers
- 6 Bolts
- 6 Nuts
- 2 Base Plates

For more information call

800.611.6109

or visit us on the web
www.horsejumps.net


Step 1 - Remove the items from the package and check the contents. See list of contents on front cover.




Step 2 - Sand or rocks can be placed inside the foot for additional weight. Slide the base plate out from the underside of the PolyPro foot. Fill and replace the base plate.



Step 3 - Set the standard posts into the PolyPro jump feet.

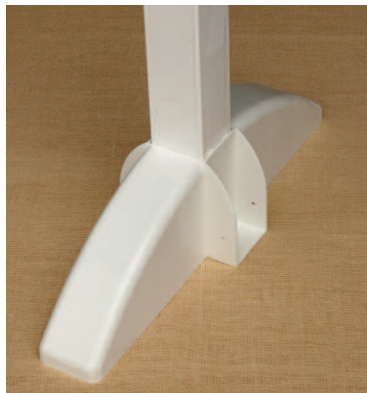

Step 4 - Attach washer to bolt and slide through the hole provided on the PolyPro foot and base of gate.

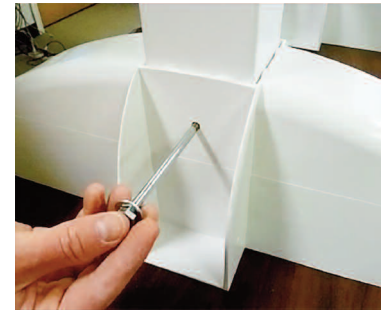

Step 5 - Slide washer onto bolt on opposite side and attach the nut. Hand tighten as much as possible.



Step 6 - Use a ratchet or wrench to securely tighten nut. This will hold the feet onto the jump and create a rugged base of support.



Step 7 - Slide the side post into the provided space on the PolyPro foot.



Go to back cover for more instructions.
